

NICHE CAP INSTALLATION (2 of 2)

8. Shelf Bracket Installation

- Make Shelf Bracket from good quality cabinet wood: install as shown (*figure 8*).

9. Installation of Trim Pieces

• If using Casing:

- Center separate plinth blocks along bottom side edges of the niche cap, screw or nail into place.
- Measure distance between plinths and shelf, cut casing to length for each side.
- Plumb/level casing, screw or nail into place. (*figure 9*)

• If using Fluted Pilasters

- **Do Not** use plinth blocks provided.
- Center and place Niche Cap Collar (arched piece or pieces) over top of niche cap casing; center, level and screw or nail into place. The bottom edges of the niche cap collar should be level with the bottom edge of the niche cap. Trim if necessary.
- Measure the distance between bottom of niche cap and shelf; trim bottom of pilasters if needed. Center the pilaster under the niche cap edge/niche cap collar; check plumb/level and screw or nail into place (*figure 10*).

10. Finishing

- Countersink all nails and screws, spackle, sand and prime.
- Paint with high quality latex or oil-based paint.
- **Do Not** use lacquer-based paints.

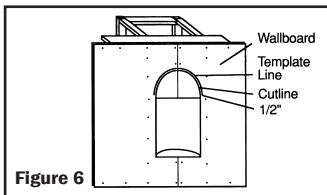


Figure 6

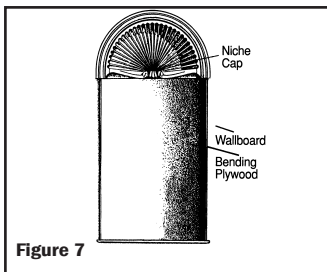


Figure 7

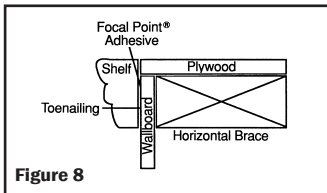


Figure 8

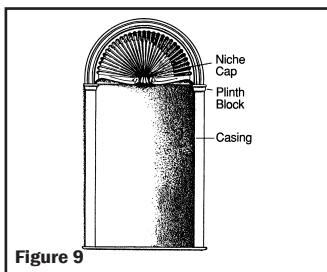


Figure 9

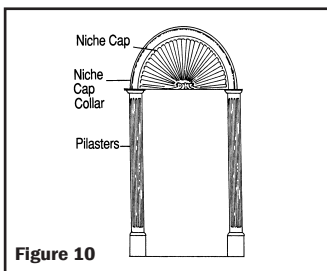


Figure 10

Niche Cap	91001 / 91004	91002 / 91005	91003 / 91006
Overall	Width A	42-1/2"	37-3/16"
	Depth B	17"	12"
	Height C	23-1/2"	18-1/4"
Inside	Width D	36"	28-3/4"
	Depth E	14-3/4"	10"
	Height F	20-1/4"	14-3/8"
Rough Opening	Width G	40"	34"
	Depth H	16-1/2"	11"
	Height I	22-1/4"	17-1/2"

